

## INTRODUCCIÓN

Muchas gracias por comprar el nuevo inalámbrico DECT 790 teclas grandes EUROCOM. Este manual ha sido diseñado para que Ud. pueda familiarizarse con el equipo. Para aprovechar al máximo su adquisición le recomendamos seguir con atención este manual antes de comenzar a usarlo.

### Precauciones importantes:

- 1) Por favor cargar la batería del equipo con al menos 12 horas antes de usar. Va a escuchar un sonido cuando el teléfono está debidamente colocado en su posición de carga.
- 2) Para mantener siempre las baterías cargadas, aproveche cuando no vaya a usar el teléfono (como durante la noche o cuando salga de su hogar para colocarlo siempre en la base de carga correctamente).

## INSTRUCCIONES DE SEGURIDAD

Cuando use el inalámbrico, siga atentamente estas precauciones de seguridad para reducir riesgos de incendio, descargas eléctricas y daños a terceros:


- ✧ Lea, comprenda y siga atentamente estas instrucciones
- ✧ Desconecte el equipo de la pared antes de limpiar. No utilice limpiadores líquidos ni limpiadores en aerosol. Utilice un trapo suave para limpieza.
- ✧ No coloque el equipo en superficies inestables. Este producto se puede caer, causando serios daños al equipo que NO están cubiertos por la garantía.
- ✧ No sobre cargue las salidas de la pared ni las extensiones de cable que pueden resultar en riesgo de fuego o descarga eléctrica.
- ✧ Nunca coloque objetos extraños u otro producto adentro de los soportes ni las bases que puedan provocar descargas eléctricas en cualquiera de sus partes. Tampoco coloque líquidos u otros productos dentro.
- ✧ Evite mover y se sugiere desconectar la unidad durante una tormenta eléctrica donde puedan producirse rayos eléctricos que descarguen en la línea eléctrica de su hogar.
- ✧ IMPORTANTE – La base debe usarse con el adaptador/transformador que se le proporcionó únicamente.
- ✧ Utilizar otro adaptador/transformador puede ocasionar graves daños eléctricos que afectan la garantía.
- ✧ Cualquier persona no habilitada por el Service de KATISUR S.A no debería abrir ni reparar el equipo.

## CARACTERÍSTICAS

- Display de 3 líneas LCD
- Un máximo de 5 teléfonos se pueden registrar a una base y un máximo de 4 bases por teléfono.
- Maximum 5 handsets can be registered to the same base unit, and maximum 4 bases per handset
- 16 idiomas disponibles en pantalla
- Pre-discado y función de edición
- Rediscado y función de pausa
- Memoria para 30 llamadas entrantes y 10 llamadas salientes
- 50 memorias para agenda con 12 caracteres y 20 dígitos máximo
- Transferencia de llamadas a otro teléfono e intercomunicador entre dos teléfonos
- Conferencia entre una llamada de línea urbana exterior y dos teléfonos
- 10 melodías de ringado para seleccionar
- Tono de melodías / auricular / volumen de manos libres

- Diferentes melodías de llamada para tipos de llamada disponible
- Función de alarma y reloj
- Opción de tono/pulso seleccionable
- Tiempo de flash 100/300/600/1000ms para seleccionar
- Función de iluminación del LCD trasero
- Función automática o manual de recepción
- Función de discado de corrido
- Función de bloqueo del teclado
- Función de silencio
- LED indicador de uso o en modo carga


#### **DISPLAY PANTALA/MAPA de FUNCIONES/TECLAS Y DESCRIPCIONES**

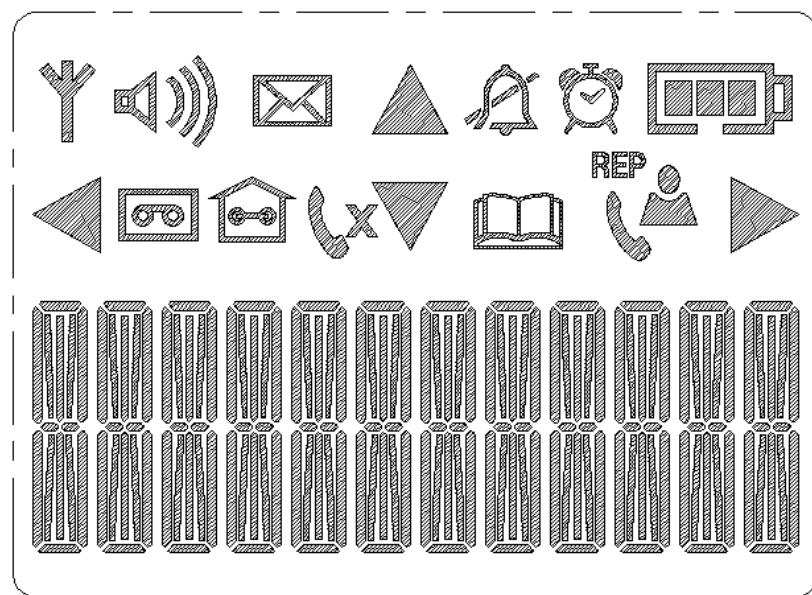

Icon	Description	Function
ANTENA	ANTENA	El icono de la antena siempre figura en la pantalla, indica la fuerza de la señal, si parpadea indica que el teléfono está fuera de rango o que es necesario registrar el teléfono a su base.
LLAMADA	LLAMADA	El icono figura en pantalla cuando alguien presiona la tecla una vez. También figura cuando se realiza una llamada externa.
ALARMA	ALARMA	El icono de la alarma queda fijo cuando se configura una alarma El icono parpadea cuando se dispara la alarma
SIN TIMBRE	SIN TIMBRE	Se muestra cuando se anula o se apaga el timbrado
AGENDA	AGENDA	Se muestra cuando está viendo contactos de la agenda
MSG VOZ	MSG VOZ	Se muestra cuando se recibe un mensaje de voz desde central ANTEL
CALLER ID	CALLER ID	El icono se muestra cuando se recibe una llamada entrante
MANO LIBRE	MANO LIBRE	El icono se muestra cuando se presiona la tecla  del teléfono en standby.
BATERIA_IND	BATERIA_IND	El icono indica que la batería se está cargando como así también la cantidad

	Intercomunica	El icono se muestra cuando se realiza una llamada interna
--	---------------	---

## Teclado

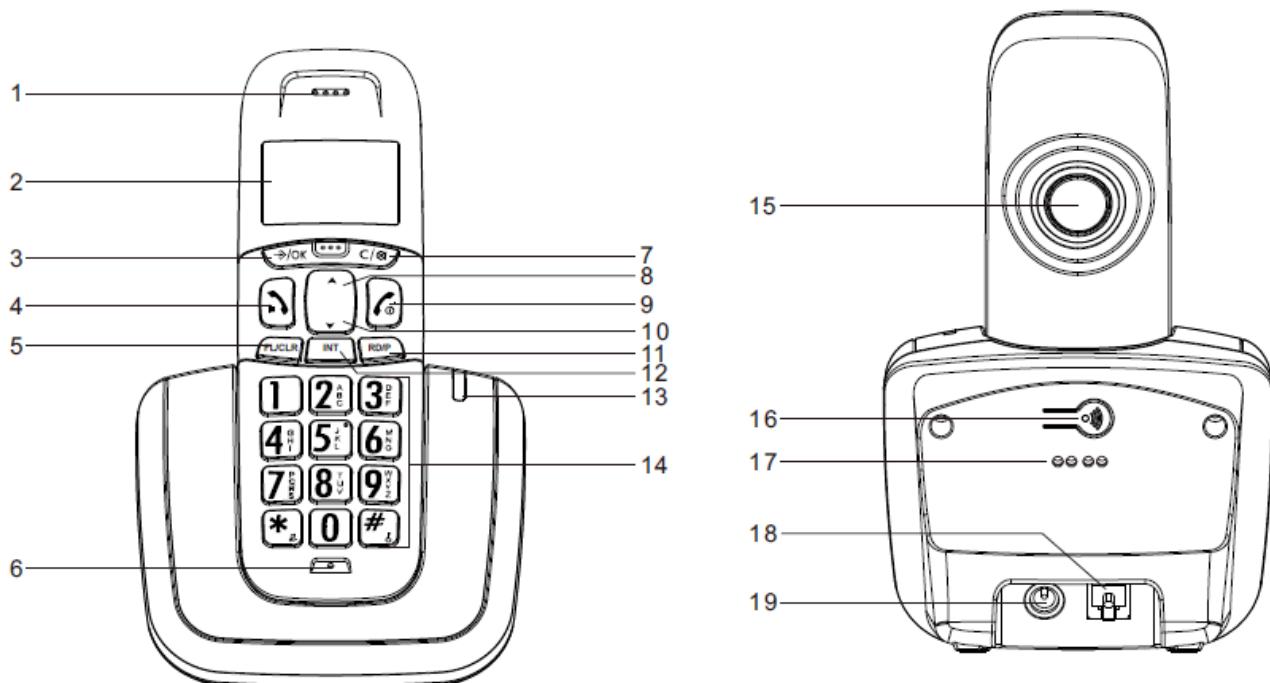

1 AURICULAR 2 LCD 3 Intercomunicador 4 MENU/OK/SILENCIO 5 ARRIBA 6  
HABLAR/M.LIBRE 7 ABAJO 8 TECLADO NÚMERO 9 FLASH/LLIMPIAR 10 MICROFONO 11  
LED INDICA CARGA/ EN USO 12 AGENDA DE CONTACTOS 13 DESCOLGAR / APAGAR 14  
REDISCAR/PAUSA 15 PARLANTE 16 BUSCADIR 17 DC6V 18 LINEA TELEFÓNICA

Icono	Descripción	Definición de las funciones
	Fuera del auricular	En modo standby presione una vez esta tecla para pasar a escuchar el tono de discado o la conversación desde el auricular de su teléfono al modo manos libre. En ese modo vuelva a presionar esta tecla para cambiar del parlante al auricular.
	MENU/OK	Entry to the menu functions from idle mode; Confirming selections & actions. In talk mode press the key to perform mute function.
	OFF/END	In talk mode, press once to hang up the call; In standby mode, hold for 3 seconds to power down the handset.
	Phonebook/BACK	This key is used to enter the phonebook both in standby mode and in talk mode. Press to exit present menu
	UP	Scrolling up through lists and menu options; Increasing the volume; Review incoming number, outgoing number and phonebook number.

▼	DOWN	Scrolling down through lists and menu options; Decreasing the volume. Review incoming number, outgoing number and phonebook number.
FL CLR	Flash/Delete	The key is used to delete memory; Delete the current input by a short pressing during menu edit.
RD/P	Rediscado/Pausa	In on hook or off hook state, press it to insert a pause time between two digits numbers. Redial the last dialed number.
#	Bloqueo teclas	A Long press to activate keypad lock; To set up a conference call.
*#	Timbrado encendido/apa	In addition to its use for text and number entry; Press and hold to switch the handset external call ring on/off
••)	Buscador	Page the handset. Register the handset to a specified base.
INT	Intercomunicador	To set up an internal call to another handset; To transfer an incoming call to another handset; To set up a conference call with an external line and an internal handset.

## INSTALLATION

- 1) Plug the main power lead into the bottom of the base unit.
- 2) Plug the main adapter into mains socket with the switch on the socket set to off.
- 3) Switch on main power at the socket.
- 4) Fit the batteries in the handset

**Note:** If you do not modify the password yourself, all the passwords in this manual are default as 0000.

### Menu Settings

During idle state, press → key to enter the menu setting, there are five sub-menus under the handset menu item.

Press or key to select the above items and then press → key to enter. Press ☎ to quit the setting state, or press ☰ to back to the previous menu. Details of each item are shown in next parts.

**Note:** The system will time out if you leave more than 30 seconds between key presses.

The menu tree as follow:

HANDSET MENU TREE		
CALL LOG	MISSED	
	RECEIVED	
	DIALED	
PHONE BOOK	LIST	
	NEW ENTRY	
	EDIT RECORD	
	DEL RECORD	
	DELETE ALL	
	MEM STATUS	
BS SETTINGS	DELETE HS	
	DIAL MODE	TONE
		PULSE

	<b>FLASH TIME</b>	100/300/600/1000MS
	<b>MODIFY PIN</b>	default 0000
	<b>BS DEFAULT</b>	default 0000
<b>HS SETTINGS</b>	<b>ALARM</b>	ON
		OFF
	<b>RING SETUP</b>	INT RING
		EXT RING
	<b>TONE SETUP</b>	KEY TONE
		BATTERY LOW
		RANGE ALARM
	<b>LANGUAGE</b>	
	<b>HS NAME</b>	
<b>REGISTRATION</b>	<b>AUTO ANSWER</b>	ON
		OFF
	<b>BARRING</b>	default 0000
	<b>DATE&amp;TIME</b>	
	<b>CONTRAST</b>	
	<b>Select BASE 5 (8levels) BASE 1,2,3,4 and AUTO</b>	
	<b>HS DEFAULT</b>	default 0000
	<b>BASE 1(2,3,4)</b>	

### Handset Menu function 1: CALL LOG

Press key, use or key to choose **CALL LOG**, press key to enter. And there are three items in this menu, **MISSED**, **RECEIVED** and **DIALED**.

#### In **CALL LOG**

- 1) Press key to enter missed call lists, received call lists or dialed call lists.
  - 2) The LCD will show the last record. (If no entries are available in the list, the LCD will be shown **EMPTY**).
  - 3) Press or key to view other record. press 0 key to check the record time
  - 4) When the desired number is show, press the key to dial out the number automatically.  
When the record is show, press key, use or key to choose, press key to confirm.
- 1) **ADD TO PB** : this function allows the user to add an entry from the caller list to the phone book.
  - 2) **DELETE** : this function allows the user to delete the currently selected entry from caller list
  - 3) **DELETE ALL** : this function allows the user to delete all numbers

**Note:** In idle state, press key once to outgoing records or press key to review incoming records.

### Handset Menu function 2: PHONE BOOK

Each individual Handset has its own phonebook, independent of each other handset, with a maximum of 50 entries, each name a maximum of 12 characters, each number a maximum of 20 digits and a melody selected from 1 to 10.

Press key. Use or key to select **PHONE BOOK**. Then press key to confirm.

#### ➤ **LIST**

LCD display **LIST**. The function allows the user to review the phone book record lists by using the or key. Press 0 key to see the name/number

When the desired number is show, press the key to dial out the number automatically.

**Shortcut:** In the idle mode, press key to enter phone book list conveniently. Press 0 key to see the name/number


#### ➤ **NEW ENTRY**

Press or key to select **NEW ENTRY** item. This function allows the user to add an entry to the phone

book.

- 1) Press  key to enter, the cursor for the name flashes.
- 2) Enter the name using the alphanumeric keys and press  key to confirm.
- 3) If you make a mistake, press **R/CLR** key to correct.
- 4) Enter the number and press  key to confirm
- 5) Press  or  key to select the melody to be stored and press  key to confirm.

Input method as follow:

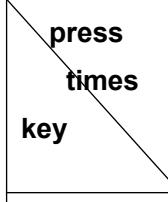key 	press times	1st	2nd	3rd	4th	5th	6th
1		--	/	1			
2	A	B	C	2			
3	D	E	F	3			
4	G	H	I	4			
5	J	K	L	5			
6	M	N	O	6			
7	P	Q	R	S	7		
8	T	U	V	8			
9	W	X	Y	Z	9		
*	*						
0	space	-	0				
#	o						

#### ➤ EDIT RECORD

Press  or  key to select **EDIT RECORD** item. This function allows the user to modify a phonebook record.

- 1) Press  key to enter, the first record in the phone book will be displayed.
- 2) Press  or  key to select the designated record to change. Once a record has been selected, the user will have the option to edit each of the name/number and change melody.

#### ➤ DEL RECORD

Press  or  key to select **DEL RECORD** item. This function allows the user to delete a phonebook entry.

#### ➤ DELETE ALL

Press  or  key to select **DELETE ALL** item. This function allows the user to delete all phonebook entries.

#### ➤ MEM STATUS

Press  or  key to select **MEM STATUS** item. If show 10/50, it means total 50 records can be stored in the phonebook and 10 records has been stored in it already.

### Handset Menu function 3: BS SETTINGS

The user is able to change the base setting in base settings item, press  key and use  or  key to select this item. Then you can do below:

#### ➤ DELETE HANDSET

This function allows the user to delete a handset registration from the base Cannot delete local

- 1) Press  key, the first show is **DELETE HS**.

- 2) Press  key to enter, the user will be prompted to enter the PIN code.
- 3) Input the correct 4-digit pin code using digit key (the default PIN code is 0000).
- 4) Press  or  key to scroll the handset names list up and down.
- 5) Press  key to confirm. The delete handset will be deleted from the list on registered handset on the base, and the handset will behave according to the out of range condition.

**Note:** In idle mode, press and keep  key for 5s, **IN USE/CHARGE** LED flashes, then press  key 7 times swiftly, the **IN USE/CHARGE** LED flashes quickly. Then all the handsets logout the base successful till **IN USE/CHARGE** LED die out.

#### ➤ DIAL MODE

The user can select to change the mode will dial.

- 1) Press  key, then using  or  key to select **DIAL MODE** item.
- 2) Press  key to enter, and the display shows **TONE**.
- 3) Press  or  key to select **TONE** or **PULSE** dial mode.
- 4) Press  key to confirm your selection.

**Note:** According to your telephone lines or PABX systems you may need to change the dialing mode between Tone and Pulse.

#### ➤ FLASH TIME

The user can select the flash time (100ms, 300ms, 600ms and 1000ms) to meet your telephone line or PABX requirement.

- 1) Press  key, then using  or  key to select **FLASH TIME** item.
- 2) Press  key to enter.
- 3) Press  or  key to select the desired flash time among 100ms, 300ms, 600ms and 1000 ms.
- 4) Press  key to confirm your selection.

#### ➤ MODIFY PIN

Some functions (including handset delete and base default) require a PIN code. The default PIN is 0000, but you are able to change to your personal 4-digit PIN.

- 1) Press  key to confirm. Then using  or  key to select **MODIFY PIN** item.
- 2) Press  key to confirm, and the display shows **PIN?**
- 3) Entry the existing PIN code for the base and handset by using numerical keys (the default PIN code is 0000), then press  to confirm.
- 4) If the old code is validated, the display shows **NEW PIN**, enter a new PIN code (4 digits), press  to confirm.
- 5) The display shows **REPEAT**, input the new PIN code again.
- 6) Press  to confirm, the code will be stored and a tone sounded.

#### ➤ BASE DEFAULT

This function allows the user to restore the base setting to the factory default.

- 1) Press  key, then using  or  key to select **BS DEFAULT** item.
- 2) Press  key to confirm.
- 3) The user will be prompted to enter the PIN code, the display shows **PIN?**, then press numerical keys to input code (default as 0000).
- 4) Press  key to confirm. If the PIN code is validated all base settings will be returned to the factory

default.

#### Handset Menu function 4: HS SETTINGS

The user is able to change a number of the settings for the handset to their own individual preferences. Press key and use or key to select **HS SETTINGS**. Then you can do below:

##### ➤ **ALARM**

The user can set the alarm on the handset and adjust the alarm settings, to give an alert at a programmed time of every day.

- 1) Press key, the first sub-menu is **ALARM** item.
- 2) Press key to confirm.
- 3) Press or key to select **ON** or **OFF**, press key to confirm. Selection of **OFF** will turn the alarm off, and the user is dropped back to the **ALARM** menu surface, selection of **ON** option will turn the alarm on, then the user will be requested to set the alarm time.
- 4) After select **ON**, press key to start the time settings of alarm, “12-00” displayed with “12” is blinking.
- 5) Press or key to change the hours, press key to confirm, use the same method to select minutes.
- 6) After select the alarm time, press key, the user will be presented with a further option to select to **ON** or **OFF** to enable or disable the snooze function on the alarm.
- 7) Press key to confirm your selection.
- 8) When the alarm is set, the will appear on the top of the display

##### ■ **Startup alarm:**

In idle state, the alarm will ring at very sharp time you have set.

##### ■ **Intermit alarm:**

During the alarming, you can switch it off by pressing any key of the handset, or when a call comes, the alarm will be intermitted too.

##### ■ **Close alarm:**

Re-enter the alarm setting menu option and select **OFF**.

#### Notes:

- 1) If the SNOOZE is set ON, the alarm will be repeated about every 5 minutes for about five times, with the alarm icon continuing to flash. During the alarming, press any key except key to intermit alarming, and will begin to ring after 5 minutes.
- 2) If the SNOOZE is set OFF, the alarm will sound for 45 seconds once.

##### ➤ **RING SETUP**

The user is able to change the handset ringing on internal calls and external calls. There are 10 ringer melodies and 5 different volume levels can be set.

- 1) Press key, then using or key to select **RING SETUP** item.
- 2) Press key to enter.
- 3) Press or key to select the **INT RING** and **EXT RING** setup.
- 4) Press key to confirm.
- 5) Press or key to select the **MELODY** and **VOLUME** setup.

If select **MELODY**,

- a) Press key to confirm.
- b) Press or key to select desired melody, the corresponding melody sound can be heard

with the selection.

- c) Press key to confirm your selection.

If select **VOLUME**,

- a) Press key to confirm.
- b) Press or key to select desired ringer volume **1- 5**, the corresponding volume sound can be heard, if you want to switch off select **OFF**.
- c) Press key to confirm your selection.

#### Notes:

- 1) If you select ring **OFF** for **INT RING**, when transfer call to this unit, it will not ring;
- 2) If you select ring **OFF** for **EXT RING**, there will be a ringing off icon display on LCD and when there is an incoming call, the handset will not ring.(Shortcut key: press and hold key to switch the handset external call ring on/off).

#### ➤ TONE SETUP

The user is able to change the handset tone settings.

- 1) Press key, then using or key to select **TONE SETUP** item.
- 2) Press key to enter.
- 3) Press or key to select the **KEY TONE** and **BATTERY LOW, RANGE ALARM** setup.
- 4) Press key to confirm.
- 5) Press or key to select the **ON** or **OFF** to enable/disable the sounding of a beep respectively.
- 6) Press key to confirm your selection.

#### Notes:

- 1) If you turn the tone on for key tone, a beep for key tone will sound when a key is pressed on the handset.
- 2) If you turn the tone on for battery low warning, a beep will sound when the battery is low.
- 3) If you turn the tone on for the out of range warning, a beep will sound when the handset goes out of range of the base unit.

#### ➤ LANGUAGE

- 1) Press key, then using or key to select **LANGUAGE** item.
- 2) Press key to enter.
- 3) Press or key to select the language from **ENGLISH** (English), **DEUTSCH** (German), **FRANÇAIS** (French), **ITALIANO** (Italian), **ESPAÑOL** (Spanish), **PORTUGUES** (Portuguese), **РУССКИЙ** (Russian), **TÜRKÇE** (Turkish), **ΕΛΛΗΝΙΚΑ** (Greek), **УКРАЇНСЬКИЙ** (Ukrainian), **POLSKI** (Polish), **MAGYAR** (Hungarian), **SVENSKA** (Swedish), **NEDERLANDS** (Dutch), **DANSK** (Danish) and **NORSK** (Norwegian). Each language will display in its own native translation.
- 4) Press key to confirm your selection.

#### ➤ HANDSET NAME

The operation will allow the user to change the handset name

- 1) Press key. Using or key to select **HS NAME**
- 2) Press key, and the display will show a flashing cursor on the name line.
- 3) Key in the handset name.
- 4) If you make a mistake, press **R/CLR** key to correct.
- 5) Press key to confirm.

## ➤ AUTO ANSWER

The Handset can be set to answer an incoming call automatically by simply pick it up from the charging cradle. The user is able to select to enable/disable this auto answer feature.

- 1) Press key. Using or key to select **AUTO ANSWER**
- 2) Press key to enter.
- 3) Press or key to select **ON** or **OFF**
- 4) Press key to confirm your selection. Exit from this sub-menu and return the user to the **AUTO ANSWER**

## ➤ BARRING

The handset can be set to disable 5 groups outgoing calls. The user is able to select to enable/disable this feature. But the internal calls to intercom or conference will still be available.

- 1) Press key. Using or key to select **BARRING**,
- 2) Press key the user will be prompted to enter the PIN code, input 4-digit code (defaulted as 0000).
- 3) Press key to confirm, then using or key to select **ON** or **OFF**, press key to confirm.
- 4) If select **ON**, the display shows **NUMBER 1**, press or to choose **NUMBER i(i=1~4)**.
- 5) Then press to confirm, using the numerical key to input number (maximum 4 digits) which you want to barring. (For example: if you set barring number is 1234, then the numbers begin with 1234 will be not allowed to be dialed out, and LCD display **CALLS BARRED**.)
- 6) Press key to confirm. Repeat the above steps to set the rest of 3 groups.

## ➤ DATE & TIME

The user is able to set the date and time on the handset, by selecting the following option.

- 1) Press key. Using or key to select **DATE&TIME**
- 2) Press key and the last two digits of the year flashes.
- 3) Edit the year by pressing or key. Then use key to confirm and enter the month value setting.
- 4) Using the same method for month, date and time setting.

### Notes:

- 1) The date and time will be automatically set when the caller ID message is received in FSK.
- 2) When the unit is powered on initially, the date and time will be blinking, please to set the date and time first according to use above methods.

## ➤ CONTRAST

The user is able to set the contrast of the LCD display, by selecting the following options.

- 1) Press key to enter LCD display contrast settings.
- 2) Press key. Using or key to select **CONTRAST**,
- 3) Press key to confirm, then press or key to select from 1-8 levels.

## ➤ SELECT BASE

The handset can be registered to more than one base (up to a maximum of 4), and you can select which base you want the handset to operate with.

- 1) Press key, then using or key to choose **SELECT BASE**.
- 2) Press key and the LCD displays **BASE 1 +**.
- 3) Press or to select base (BASE 1~4) or AUTO.(Note: the handset will only link with base number followed by a "+")

4) Press to begin searching, if you hear a sound of “di-du-di”, means linked successful.

**Note:** If you select “AUTO”, the handset will link with the first of the registered bases that it finds.

➤ **HANDSET DEFAULT :**

This function allows the user to restore the handset setting to the factory default

- 1) Press key, then using or key to select **HS DEFAULT** item.
- 2) Press key to confirm.
- 3) The display shows **PIN?**, then key in the PIN code (default 0000).
- 4) Press key to confirm. If the PIN code is validated all handset settings will be returned to the factory default.

**Handset Menu function 5: REGISTRATION**

Maximum 5 handsets can be linked to the same base unit by the follow ways,

Maximum 4 bases can be linked to the same handset by the follow ways:

- 1) In standby mode, press key, then using or key to select **REGISTRATION** item.
- 2) Press key to enter, Press or key to select BASE from **BASE1, BASE2, BASE3 or BASE4**.
- 3) Press key to confirm, LCD displays **PIN?**, then enter the pin code (defaulted as 0000, if input wrong number, press **R/CLR** to delete ).
- 4) When finished, press key to confirm. LCD display **SEARCHING**, then press **BASE** and hold key until you has get **DI-DU-DU-** sound. The handset and base have registration successfully.

**Notes:**

- 1) If the handset and base is fail to registration successfully, the handset will return to the standby mode.
- 2) You can repeat the above steps to register another handset for the same base, and the successfully registered handset will display **HS2** or **HS3** on the LCD according to the registration sequence.
- 3) Press key to page the handset when difficult to look for.

**ADVANCED OPERATION**

**Speakerphone operation & volume control**

Press key once to obtain a dial tone, dial your number, when you hear the called party answers the phone. You can also press the key one more time to change the speaker to answer the call.

During the speakerphone operation, the user can adjust the speaker volume level by pressing the or key. Total 5 levels for selection.

**Note:** If you press key Use the speaker to convert to headphones, you can press the or key to adjust the earpiece volume, total 5 levels for selection.

**Mute the mouthpiece**

During a call, press key once to mute the mouthpiece and **MUTE** will show on LCD. Press key again to get back to the call and the **MUTE** will disappear.

**Caller ID – type I & II**

➤ **TYPE I**

After you have applied the caller ID service, you can see the caller party phone number during an incoming ring.

➤ **TYPE II**

During the conversation, the phone number of the incoming call of the third party can be seen in the unit.

This function can be worked when the user applied the Telecom service.

### **Flash**

The flash function of **FL/CLR** key can support some special network service, such as call waiting, call transfer, etc. These services require a subscription and the operations depend on the different exchanger.

### **Pause**

Press **RD/P** key will insert a 3.6 seconds pause time between two digit numbers.

### **Pre-dialing**

The unit has pre-dialing function, when you may enter and edit the number before dial it out.

The following procedure describes how to use this function:

- 1) In idle mode, enter the number you want to dial. During entering, you can press **R/CLR** key to correct the number.
- 2) Press  key once, the unit will dial out the number show on the LCD.

### **Redial function**

In idle state, press  key, press **RD/P** key, the last dialed number will be dialed again.

### **To Lock/Unlock the keypad**

#### **To lock the keypad**

Press and hold the  key for about 2 seconds.

You will hear a beep tone, while the keypad is locked, any key you press is invalid.

#### **To unlock the keypad**

Press and hold the  key for about 2 seconds.

You will hear a beep tone, the handset will be unlocked and it will go back to idle mode.

## **MULTI-HANDSET OPERATION**

Maximum 5 handsets can be linked to the same base unit. Maximum 4 bases can be linked to the same handset.

**If you have two handsets registered with one base, operation it by the follow ways:**

#### ➤ **Intercom**

The intercom feature is activated by pressing the **INT** key.

- 1) In idle mode, press **INT** key once.
- 2) The destination handset will ring, press  key to enter conversation mode. To end intercom mode, either handset can hang up the call by press  key.

#### ➤ **Call transfer**

During a call, it's to transfer the call to another handset.

- 1) During a phone call, press **INT** key once. The destination handset will ring.
- 2) Press  key of the other handset to accept the call.
- 3) The two internal handsets will be connected. To complete the transfer of the call, the initiating handset should be placed on the cradle and the external call will now be connected to the second handset.

#### ➤ **Three-way conference call**

- 1) When a call comes, Press (HS1)  key
- 2) Then press (HS1) **INT** key once. The destination handset will ring.
- 3) Press (HS2)  key to accept call.
- 4) Press (HS1) then the  key then you can talk all together.

- 5) Press  to quit the three-way conference mode, then other parties can also continue to communication.

**If you have more than two handsets registered with one base, operation it by the follow ways:**

➤ **Intercom**

The intercom feature is activated by pressing the **INT** key.

- 1) In idle mode, press **INT** key once.
- 2) The user will be prompted to select the number of the internal handset with which you wish to connect.
- 3) The destination handset will ring, press  key to enter conversation mode. To end intercom mode, either handset can hang up the call by press  key.

➤ **Call transfer**

During a call, it's to transfer the call to another handset.

- 1) During a phone call, press **INT** key once, you will be prompted to select the number of the internal handset with which they wish to connect.
- 2) The destination handset will ring. With the melody defined for an internal call.
- 3) Press  key of the other handset to accept the call.
- 4) The two internal handsets will be connected. To complete the transfer of the call, the initiating handset should be placed on the cradle and the external call will now be connected to the second handset.

➤ **Three-way conference call**

- 1) When a call comes, Press (HS1)  key
- 2) Then press (HS1) **INT** key once, you will be prompted to select the number of the internal handset with which you wish to connect.
- 3) The destination handset will ring.
- 4) Press (HS2)  key to accept call.
- 5) Press (HS1) then the  key then you can talk all together.
- 6) Press  to quit the three-way conference mode, then other parties can also continue to communication.

**Note:** Due to continuous product development, all features and specifications are subject to change without prior notice.

## **TROUBLE SHOOTING**

- ✧ **No signal bar is displayed on the screen**
  - ✓ The handset is out of range. Move it closer to the base station
- ✧ **No dialing tone**
  - ✓ Check your phone connections
  - ✓ The handset is out of range. Move it closer to the base station
- ✧ **No docking tone**
  - ✓ The handset is not placed properly on the base station/ charger
  - ✓ The charging contacts are dirty. Disconnect the power adaptor first and clean the contact with proper damp cloth.
- ✧ **The handset on the charger does not charge**
  - ✓ Make sure the batteries are inserted correctly.
  - ✓ Make sure the handset is placed properly on the base station/ charger

- ✓ Batteries are defective. Purchase new ones for replace.
- ✧ **No display**
  - ✓ Make sure the batteries are charged
  - ✓ Make sure there is power and the phone is connected
- ✧ **The handset no ring**
  - ✓ Make sure the handset ring tone is turned on.
- ✧ **Ring volume too low**
  - ✓ Check if the ringing volume is set improper, reset it.
- ✧ **Receive only**
  - ✓ Check if P/T mode is properly set.
  - ✓ Check if you have set the barring number, if you want dial out this number, reset the barring number.
- ✧ **The base can not page the handset**
  - ✓ Repeat the registration operations to register the base and handset again.
- ✧ **Most of the functions failed**
  - ✓ Check if the batteries are strong enough, charge the batteries.
  - ✓ If batteries are OK, remove the battery, unplug the lines and reinstall after 10 minutes.

**Note:** Due to continuous product development, all features and specifications are subject to change without prior notice.